

PRO VERO

ID-0052

Infrared Motion Sensor



Instruction

Welcome to use ID-0052 infrared motion sensor!

The product adopts good sensitivity detector and integrated circuit. It gathers automatism, convenience, safety, saving-energy and practical functions. It utilizes the infrared energy from human as control-signal source and it can start the load at once when one enters detection field. It can identify day and night automatically. It is easy to install and used widely.

SPECIFICATION:

Power Source: 220-240V/AC

Power Frequency: 50Hz

Ambient Light: 10LUX/2000LUX (choice)

Time Delay: 5s, 30s, 1min, 3min,

5min, 8min (choice)

Rated Load: Max.800W

200W



Detection Moving Speed: 0.6-1.5m/s

Detection Range: 120° /360°

Detection Distance: 3m/6m (choice) (<24℃)

Working Temperature: -20~+40℃

Working Humidity: <93%RH

Power Consumption: approx 0.5W

Installation Height: 1.8-2.5m (wall mounting)

Installation Height: 2.2-4m (ceiling mounting)

FUNCTION:




- Can identify day and night automatically: when turn to SUN (max), it will work day and night, when turn it to MOON (min), it will only work in the ambient light less than 10LUX. As for adjustment, please refer to testing way.
- SENS adjustable: It can be adjusted according to using location. The detection distance of low sensitivity could be only 3m and high sensitivity could be 6m which fits for large room.
- Time-Delay is added continually: When it receives the second induction signals within the first induction, it will restart to time from the moment.



INSTALLATION ADVICE:

As the detector responds to changes in temperature, avoid the following situations:

- Avoid pointing the detector towards objects with highly reflective surfaces, such as mirrors etc.
- Avoid mounting the detector near heat sources, such as heating vents, air conditioning units, light etc.
- Avoid pointing the detector towards objects that may move in the wind, such as curtains, tall plants etc.

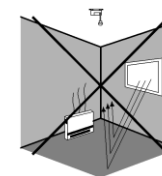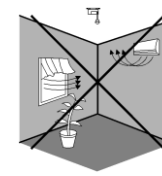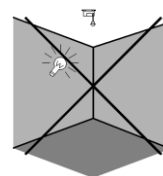

CONNECTION:




WARNING

Warning. Danger of death through electric shock!


- Must be installed by professional electrician.
- Disconnect power source.
- Cover or shield any adjacent live components.
- Ensure device cannot be switched on.
- Check power supply is disconnected.

- Connect the power and the load according to the connection-wire diagram.
- Fix the bottom on the selected position with the inflated screw.
- Switch on the power and test it.

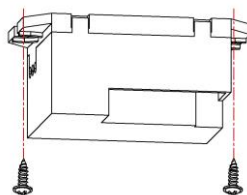


CONNECTION-WIRE DIAGRAM:

(See the right figure)

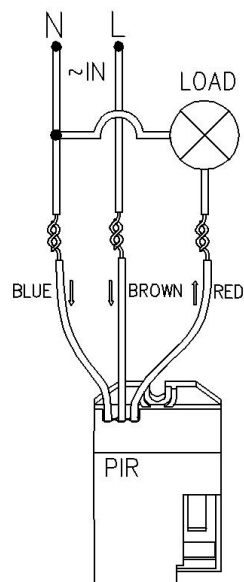

TEST:

- Slide the LUX switch to SUN position (below is SUN). Slide the SENS switch to maximum (below is the maximum). Adjust the TIME switch, slide 5" switch to ON position. (slide upwards)

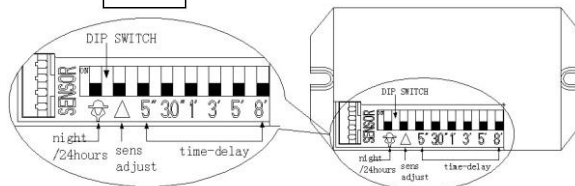

- Switch on the power; the sensor and its connected lamp will have no signal at the beginning. After Warm-up 30sec, the sensor can start work. If the sensor receives the induction signal, the lamp will turn on. While there is no another induction signal any more, the load should stop working within $10\text{sec} \pm 3\text{sec}$ and the lamp would turn off.
- Slide the LUX knob above on the minimum (moon). If the ambient light is more than 3LUX, the sensor would not work and the lamp stop working too. If you cover the detection window with the opaque objects (towel etc), the sensor would work. Under no induction signal condition, the sensor should stop working within $10\text{sec} \pm 3\text{sec}$.

Note: when testing in daylight, please turn LUX knob to (SUN) position, otherwise the sensor lamp could not work! If the lamp is more than 60W, the distance between lamp and sensor should be 60cm at least.

SOME PROBLEM AND SOLVED WAY:

- The load do not work:
 - a. Please check if the connection-wiring of power and load is correct.
 - b. Please check if the load is good.
 - c. Please check if the working light sets correspond to ambient light.
- The sensitivity is poor:
 - a. Please check if there has any hindrance in front of the detection window to affect to receive the signal.
 - b. Please check if the ambient temperature is too high.
 - c. Please check if the induction signal source is in the detection fields.
 - d. Please check if the installation height corresponds to the height showed in the instruction.
 - e. Please check if the moving orientation is correct.
- The sensor can not shut off the load automatically:
 - a. Please check if there is continual signal in the detection field.
 - b. Please check if the time delay is the longest.
 - c. Please check if the power corresponds to the instruction.

Dziękujemy za zakup naszego czujnika na podczerwień model ID - 0052.

Czujnik ruchu z zewnętrznym sensorem służy do automatycznego sterowania oświetleniem lub innymi urządzeniami elektrycznymi. Zapewnia przy tym oszczędność energii elektrycznej. Oświetlenie jest włączane za pomocą czujnika ruchu PIR, działającego na podczerwień. Oświetlenie włącza się pod wpływem ruchu obiektu wydzielającego ciepło.

UWAGA!

Urządzenie współpracuje z diodami LED.

Przed przystąpieniem do montażu prosimy o dokładne zapoznanie się z instrukcją obsługi.

SPECYFIKACJA TECHNICZNA:

Napięcie zasilania: 220-240V/AC

Częstotliwość: 50Hz

Kąt widzenia: 120° /360°

Zasięg: 3m/6m (do wyboru) (<24°C)

Temperatura pracy: -20~+40°C

Natężenie światła: 10LUX/2000LUX (do wyboru) Wilgotność: <93%RH

Czas świecenia: 5s, 30s, 1min, 3min,
5min, 8min (do wyboru)

Wykrywana prędkość ruchu: 0.6-1.5m/s

Wysokość montażu: 2.2-4m (na suficie)

1.8-2.5m (na ścianie)

Maksymalne obciążenie:  ~800W
 200W

FUNKCJE




- Automatyczne wykrywanie dnia i nocy (LUX): włączenie opcji SŁOŃCE (przycisk DIP SWITCH – na dole) powoduje, że urządzenie będzie pracować w dzień i w nocy. W przypadku opcji KSIĘŻYC (przycisk DIP SWITCH - na górze) urządzenie pracować będzie tylko, gdy natężenie światła będzie mniejsze niż 10 lx.
- Regulacja czułości: możliwa regulacja, niska czułość w małych pomieszczeniach a wysoka w dużych.
- Włącznik czasowy (w trybie ciągłym): gdy czujnik wykryje kolejny sygnał indukcyjny, następuje zrestartowanie czasu działania od nowa.



PORADY DOTYCZĄCE MONTAŻU

Jako, że czujnik reaguje na zmiany temperatury, należy unikać następujących sytuacji:

- Unikaj kierowania czujnika w kierunku obiektów silnie odbijających (np. lustro itp.);
- Unikaj montażu czujnika blisko źródeł ciepła tj. grzejniki, klimatyzacja;
- Unikaj montowania czujnika w pobliżu obiektów, które mogą poruszać się pod wpływem wiatru (np. zasłony).

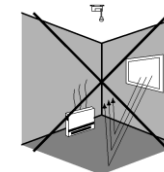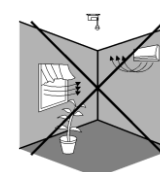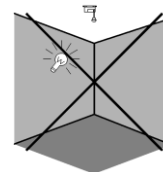

CONNECTION:



WARNING


Uwaga.


- Montażu powinna dokonać osoba posiadająca odpowiednie kwalifikacje
- Odłącz źródło zasilania
- Przewody elektryczne muszą być podłączone zgodnie z instrukcją
- Uziemienie musi być podłączone.

- Podłącz przewody zgodnie ze schematem połączeń.
- Przymocuj czujnik za pomocą wkrętów (brak w zestawie).
- Podłącz zasilanie i przetestuj.

Schemat połączenia:

(Patrz rysunek)

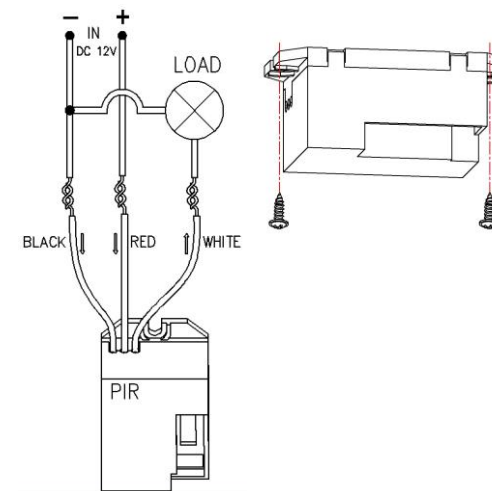

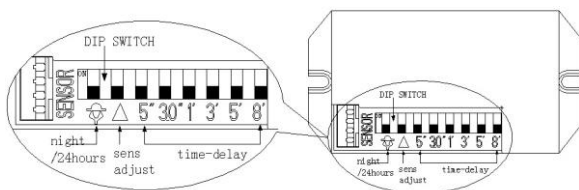

TESTOWANIE

- Ustaw przełącznik LUX -  w pozycji dolnej.
- Ustaw przełącznik SENS -  w pozycji dolnej.
- Ustaw przełącznik TIME przesuwając przycisk 5" w położenie ON (w górę).
- Po włączeniu zasilania i nagrzaniu przez 30s czujnik może zacząć pracę. Jeśli czujnik wykryje ruch to lampa włączy się. Jeśli nie będzie żadnego sygnału indukcyjnego, urządzenie powinno wyłączyć się w przeciągu $10 \pm 3s$.
- Ustaw przełącznik LUX w położeniu KSIĘŻYC – urządzenie nie będzie włączać się w dzień. Zakrycie czujnika nieprzezroczystym przedmiotem spowoduje zatrzymanie pracy podłączonego odbiornika z powodu braku sygnału wzbudzającego w ciągu $10 \pm 3s$.
- **UWAGA!**
- W przypadku testowania w świetle dziennym – przełącznik LUX powinien znajdować się w położeniu SŁOŃCE (na dole) – w przeciwnym razie czujnik może pracować nieprawidłowo.

ROZWIĄZYWANIE PROBLEMÓW

- Obciążenie nie jest załączane:
 - Sprawdź podłączenie przewodów zasilających czujnik;
 - Sprawdź czy obciążenie (LOAD) jest dobrze dobrane;
 - Sprawdź nastawienie przełącznika LUX.
- Czułość jest słaba:
 - Sprawdź czy w pobliżu czujnika nie ma obiektów zakłócających sygnał;
 - Sprawdź czy temperatura nie jest za wysoka;
 - Sprawdź czy obiekt wykrywany znajduje się w polu detekcji czujnika;
 - Sprawdź zalecaną wysokość montażu.
- Czujnik nie może automatycznie odłączyć obciążenia:
 - Sprawdź czy w polu detekcji nie występują ruchome elementy;
 - Sprawdź czy czas naprawy czujnika nie jest za długi;
 - Sprawdź napięcie zasilania urządzenia;
 - Sprawdź czy w pobliżu czujnika nie zamontowano urządzeń zakłócających pracę.